
INSTRUCTION MANUAL

ESSENTIAL OIL DIFFUSER

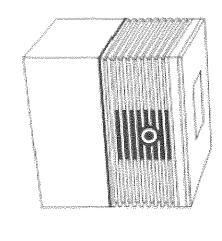

ITEM NO: GA-T200

OPERATING METHOD

Run time (minute) Start working period(hour)

今 强强。但但 60 mm + 1 mm +

AR des

Stop time(minute)

End working period(hours)

4. Press SET button to goes into RUN TIME setting , you can set 02 minutes, means continuously blow the mist out of device within next 2 minutes, you can set from 00 to 59 $\,$ 3. Press SET button, it goes into STRAT WORKING PERIOD time(hour) setting (09:00), the figure you can change from 00:00 to 24:00 by " \mathbb{A} " or " \mathbb{V} " button.

Standard time setting

Power button

Ġ

SET -

Set button

WARNING

damage. Please always be caution when there is a child nearby. Thank youl Please read this manual carefully and keep it properly before use the machine. Do not lean or shake the device when it's full of essential oils, any incorrect operation will cause

ACCESSORIES











Top

Upper part

Suction magnet

Lower part

Essential oil bottle

User Manual

A/C adapter

Diffuser

Empty oil bottle

Model No.:	GA-T200	Oil Capacity:	200ml
Product Size:	Product Size: L160 x W160 x H160 mm Oil Consumption: ≤ 2.0 ml/Hr	Oil Consumption:	≤ 2.0ml/Hr
Voltage:	DC 12V±5%≤1A	Overall Power:	≤ 12W
Coverage:	about 600 m³	Noise:	≤ 40dB

PRODUCT OUTLINE







& Front


SPECIFICATION

Model No.:	GA-T200	Oil Capacity:	200ml
Product Size:	Product Size: L160 x W160 x H160 mm Oil Consumption: ≤ 2.0 ml/H	Oil Consumption:	≤ 2.0ml/Hr
Voltage:	DC 12V±5%≤1A	Overall Power:	s 12W
Coverage:	about 600 m³	Noise:	≤ 40dB

Reverse side

ATTENTIONS

 - oil or water are at your own risk. 1. This device is only workable with fragrance oil, any damage caused by using other type of
- DO NOT lean or Shake the device when oil bottle is full, so as to avoid essential oil leakage. Otherwise, any pollution or damage caused inside PCB board are no longer in warranty.
- Kind reminder: if you use the device in an airtight space or small room, please adjust appropriate working time, in case it makes you feel un-comfortable. An acceptable density of fragrance can bring you physical and spiritual pleasure.



NOTE: If the power source being suddenly shut down, just re-connect the A/C adapter, the diffuser machine will re-start working as per your last/ previous setting program. Press " * * * * * button shut off the device, Press * * * * * turns on the device.

7. Time Setting complete, the device start working as per your wish. you can change from 00:00 to 24:00 by "\mathbb{\textit{\textit{m}}}" or "\textit{\textit{\textit{\textit{m}}}" button.

6. Press SET button to goes into END WORKING PERIOD setting (hour) (16:00) the figure

minutes before re-start blowing again, you can set from 00 to 59 minutes.

5. Press SET button to start STOP TIME setting, you can set 08 minutes, means stop 8



Photo-I

APPLICATION AREA

Left hand lifting device, and take out the oil bottle with your right hand. Unscrew essential oil bottle cap, Put essential oil bottle into device essential oil tank along vertical

Put vertically the device, hold the main body of device.

direction, unscrew essential oil bottle anticlockwise. Inversion and tilt are prohibited in the

process, to avoid oil leakage causing equipment damage.

- The hotel lobby / club
- The home furnishing den / office / bedroom

TIME SETTING

again, LCD display lighting, enter the Settings state.

local time in your own country

Press power switch button , The device was turned off, Press power switch button

shows standard time of Beijing (synchronization time with internet). You can change it to

Connect adapter with device and it will be power on automatically, then LCD display

1. Press SET button, it goes into STANDARD TIME setting (08:30), the figure you can change from 00:00 to 24:00 by " \mathbb{A} " or " \mathbb{V} " button.

Press SET button to confirm STANDARD TIME hour setting, and goes into minutes

setting (08:30), you can set from 00 to 59 minutes.

4. clothing chain / shopping malls / hall of bank /theater hall / star hotel / airport / and other 3. Bathroom /KTV rooms /foot bath rooms / other places of consumption rooms

WARRANTY

- any defective or damaged devices caused and confirmed by manufacturer. 1. Within one year from the date of purchase, You can receive a free warranty service for
- Free replacement policy does not include those accessories and transport costs.
 Warranty will not given in case of the following circumstances:
- a. Damaged to be confirmed or caused by the end consumer
- b. Use incorrectly, use low quality fragrance oil
- c. Drop into water, use under abnormal voltage
- d. Date exceed the warranty period.